

LIVENOTE CONNECTION

BAUD RATE:

9600 or 2400

OUTPUT:

Caseview

SERIAL ADAPTER EXAMPLES:



Please note serial connections have only 9 pins like below.




Official Reporters:

If after following these tips you do not achieve a successful connection, please call CTS at Ext. 7700.

NOTES

COM Port in your software setting must match COM Port in the **Windows Device Manager**.

Shortcut: click **Windows** button in bottom left corner and type in **devmgmt.msc**

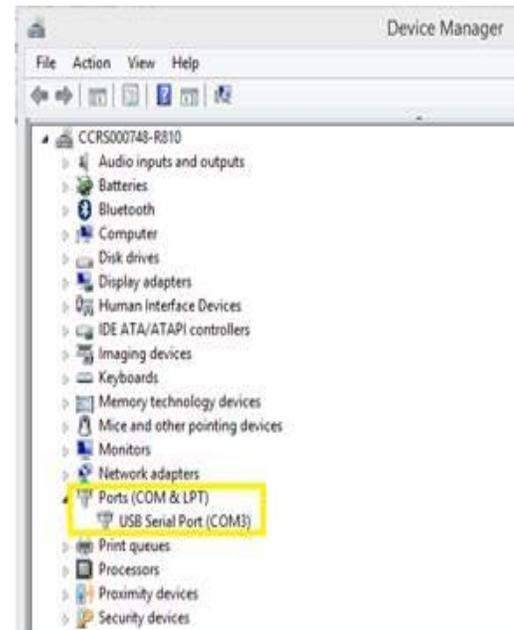


- The COM port on your computer should have no effect with the COM port on the judge's computer. They do not need to match.
- The baud rate generally **DOES** need to match the baud rate on the judge's computer .
- If you are seeing symbols on the judge's screen then change your baud rate and try again.
- If you have never used the serial adapter before, you may need to install the drivers by using the disk provided with the new adapter.

REAL TIME CONNECTION

To connect to the bench officer's monitor for realtime without the use of litigation support software, connect the VGA cable provided by the court into your computer. If you do not have a VGA port available on your laptop you will need an adapter to convert your video output to VGA.



Please note VGA Connections have only 15 pins like below.

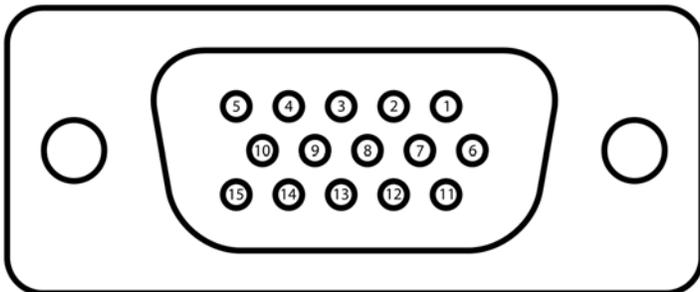

COMMON ADAPTERS



Apple Macintosh
Mini Display port to VGA



HDMI to VGA Adapter

QUICK TIP

In Windows 7 and Windows 8, users can mirror their computers display by pressing and holding the Windows button + "P".

